

INON

INON UFL-M150 ZM80 Compatibility Chart

This chart provides necessary information when you use 「UFL-M150 ZM80」 for your camera system. Please make sure to check compatibility, necessary Mount Base and Mount Converter before using this product.

- Glossary: “Comp.” Compatibility of the UFL-M150 ZM80. “O” : compatible. “X”: Not compatible
 “M.B.” Compatible Mount Base type to use the UFL-M150 ZM80.
 “M.C.” Indicates necessary Mount Converter to attach the UFL-M150 ZM80 on a Mount Base.
 M27-AD means 「M27-AD Mount Converter for UFL-M150 ZM80」
 M27-LD means 「M27-LD Mount Converter for UFL-M150 ZM80」
 M27-M67 means 「M27-M67 Mount Converter for UFL-M150 ZM80」

Compatibility Chart

Mfr.	Housing	Camera	Comp.	M.B.	M.C.	RMK
Olympus	PT-050	XZ-1	x			*1
	PT-047	μ TOUGH-6000	O	28AD Mount Base-PT-045/047	M27-AD	
	PT-046	FE-3010	O	AD Mount Base-PT-044/046	M27-AD	
	PT-045	μ TOUGH-8000	O	28AD Mount Base-PT-045/047	M27-AD	
	PT-044	FE-360	O	AD Mount Base-PT-044/046	M27-AD	
	PT-043	μ1030SW	O	28AD Mount Base-PT-043	M27-AD	
	PT-042	μ1020	x			*2
	PT-041	μ790SW,μ850SW	O	AD Mount Base-PT-041	M27-AD	
	PT-039	μ780,μ830	untested			
	PT-037	SP-550UZ/560UZ	x			*1
	PT-036	μ760	O	AD Mount Base-PT-032/036	M27-AD	
	PT-035	μ770SW,μ795SW	O	AD Mount Base-PT-033/035	M27-AD	
	PT-034	μ750	untested			
	PT-033	μ720SW,μ725SW	O	AD Mount Base-PT-033/035	M27-AD	
	PT-032	μ710	O	AD Mount Base-PT-032/036	M27-AD	
	PT-031	SP-700	O	AD Mount Base-PT-031	M27-AD	
	PT-030	SP-350	O	AD Mount Base-PT-030	M27-AD	
	PT-029	μ600	O	AD Mount Base-PT-029	M27-AD	
	PT-027	C-7070WZ	x			*1
	PT-026	μ-40	O	AD Mount Base-PT-026	M27-AD	
	PT-024	X-3	O	AD Mount Base-PT-024	M27-AD	
	PT-023	C-8080WZ	x			*1
	PT-022	C-760UZ,C-770UZ	x			*1
	PT-020	C-5060WZ	x			*1
	PT-018	C-740UZ,C-745UZ,C-750UZ, C-755UZ	x			*1
	PT-016	μ-10,μ-15,μ-20 μ-25,μ-30	O	AD Mount Base-PT-016	M27-AD	
	PT-015	C-5050Z	x			*1
	PT-014	X-1,X-2	O	AD Mount Base-PT-014 M67 Mount Base-PT-014	M27-AD M27-M67	
	PT-012	C-40Z	O	AD Mount Base-PT-012 M67 Mount Base-PT-012	M27-AD M27-M67	
	PT-010	C-2020Z,C-2040Z,C-3000Z, C-3030Z,C-3040Z,C-3100Z, C-4040Z,C-4100Z	x			*1
PT-009	C-200Z,C-300Z	untested				
Fujifilm	WP-FXF80	Finepix F80EXR	x			*1
	WP-FXF200	Finepix F200EXR	x			*1
	WP-FXF100	Finepix F100fd	x			*1
	WP-FXF50	Finepix F50fd	O	AD Mount Base-FXF50	M27-AD	
	WP-FXF40	Finepix F40fd	O	AD Mount Base-FXF40	M27-AD	
	WP-FXF30	Finepix F30,F31fd	O	AD Mount Base-FXF30	M27-AD	
	WP-FXF10	Finepix F10,F11	O	AD Mount Base-FXF10	M27-AD	
	Sony	MPK-THGB	DSC-T90,T77,T700	O	AD Mount Base-THG/THGB	M27-AD
MPK-THG		DSC-T77,T700	O	AD Mount Base-THG/THGB	M27-AD	
MPK-WD		DSC-W300	O	M67 Mount Base-WD	M27-M67	
		DSC-W170	untested			
MPK-WA		DSC-W1,W5,W7	O	AD Mount Base-WA	M27-AD	
MPK-NA		DSC-N1,N2	O	AD Mount Base-NA	M27-AD	
MPK-PHB		DSC-P100,P150	O	AD Mount Base-PHB	M27-AD	

Mfr.	Housing	Camera	Comp.	M.B.	M.C.	RMK	
Canon	WP-DC36	IXY 200F	O	28AD Mount Base-DC36		M27-AD	
	WP-DC33	IXY D220IS	O	28AD Mount Base-DC33		M27-AD	
	WP-DC32	IXY D510IS	O	28AD Mount Base-DC32		M27-AD	
	WP-DC31	IXY D210IS	O	AD Mount Base-DC31		M27-AD	
	WP-DC29	IXY D110IS	O	AD Mount Base-DC29		M27-AD	
	WP-DC27	IXY D3000IS	O	AD Mount Base-DC19/27		M27-AD	
	WP-DC26	IXY D920IS	O	28AD Mount Base-DC26		M27-AD	
	WP-DC24	IXY D95IS	O	AD Mount Base-DC22/23/24		M27-AD	
	WP-DC23	IXY D25IS	O	AD Mount Base-DC22/23/24		M27-AD	
	WP-DC22	IXY D20IS	O	AD Mount Base-DC22/23/24		M27-AD	
	WP-DC19	IXY D2000IS	O	AD Mount Base-DC19/27		M27-AD	
	WP-DC17	IXY D910IS	O	28AD Mount Base-DC17		M27-AD	
	WP-DC15	IXY D810IS	O	AD Mount Base-DC5/15		M27-AD	
	WP-DC14	IXY D90	O	AD Mount Base-DC3/4/13/14		M27-AD	
	WP-DC13	IXY D10	O	AD Mount Base-DC3/4/13/14		M27-AD	
	WP-DC9	IXY D900IS	O	28AD Mount Base-DC9		M27-AD	
	WP-DC7	IXY D1000	O	AD Mount Base-DC7		M27-AD	
	WP-DC5	IXY D800IS	O	AD Mount Base-DC5/15		M27-AD	
	WP-DC4	IXY D70	O	AD Mount Base-DC3/4/13/14		M27-AD	
	WP-DC3	IXY D80	O	AD Mount Base-DC3/4/13/14		M27-AD	
	WP-DC80	IXY D700	O	AD Mount Base-DC70/80		M27-AD	
	WP-DC70	IXY D600	O	AD Mount Base-DC70/80		M27-AD	
	WP-DC800	IXY D400/D450/D500	O	AD Mount Base-DC800		M27-AD	
	WP-DC38	PowerShot S95	O	28LD Mount Base-DC38		M27-LD	
	WP-DC35	PowerShot S90	O	28AD Mount Base-DC35		M27-AD	
	WP-DC12	PowerShot A570IS	O	AD Mount Base-DC12		M27-AD	
	WP-DC2	PowerShot A540	O	AD Mount Base-DC2		M27-AD	
	WP-DC1	PowerShot S80	O	28AD Mount Base-DC1		M27-AD	
	Panason	MCFT3	LUMIX FT3	O	28LD Mount Base-FT3		M27-LD
		MCFT2	LUMIX FT2	O	28AD Mount Base-FT2		M27-AD
MCFT1		LUMIX FT1	O	28AD Mount Base-FT1		M27-AD	
MCTZ20		LUMIX TZ20	x			*1	
MCTZ10		LUMIX TZ10	x			*1	
MCTZ7		LUMIX TZ7	x			*1	
MCTZ5		LUMIX TZ5	x			*1	
MCZX3		LUMIX ZX3,ZX1	x			*1	
MCZX1		LUMIX ZX1	x			*1	
MCFX40		LUMIX FX40	O	28AD Mount Base-MCFS5/FX35/FX40		M27-AD	
MCFX35		LUMIX FX37,FX35	O	28AD Mount Base-MCFS5/FX35/FX40		M27-AD	
MCFX30		LUMIX FX33,FX30	O	28AD/AD Mount Base-MCFX01/07/30		M27-AD	
MCFX07		LUMIX FX07,FX01,FS2,FS1	O	28AD/AD Mount Base-MCFX01/07/30		M27-AD	
MCFX01	LUMIX FX01	O	28AD/AD Mount Base-MCFX01/07/30		M27-AD		
MCFS5	LUMIX FS3	O	28AD Mount Base-MCFS5/FX35/FX40		M27-AD		

*1 Not usable since the camera has large master lens or super zoom.

*2 Not usable since image quality is extremely poor.

INON Inc.

2-18-9, Dai, Kamakura,
 Kanagawa 247-0061 JAPAN
 E-mail support@inon.co.jp
 Fax. +81(0)467-48-2178
 URL <http://www.inon.jp/>

December 2011